


FAI-8200 2-Way Paging Alarm Wiring Diagram

Modified by Alarmsellout, LLC.

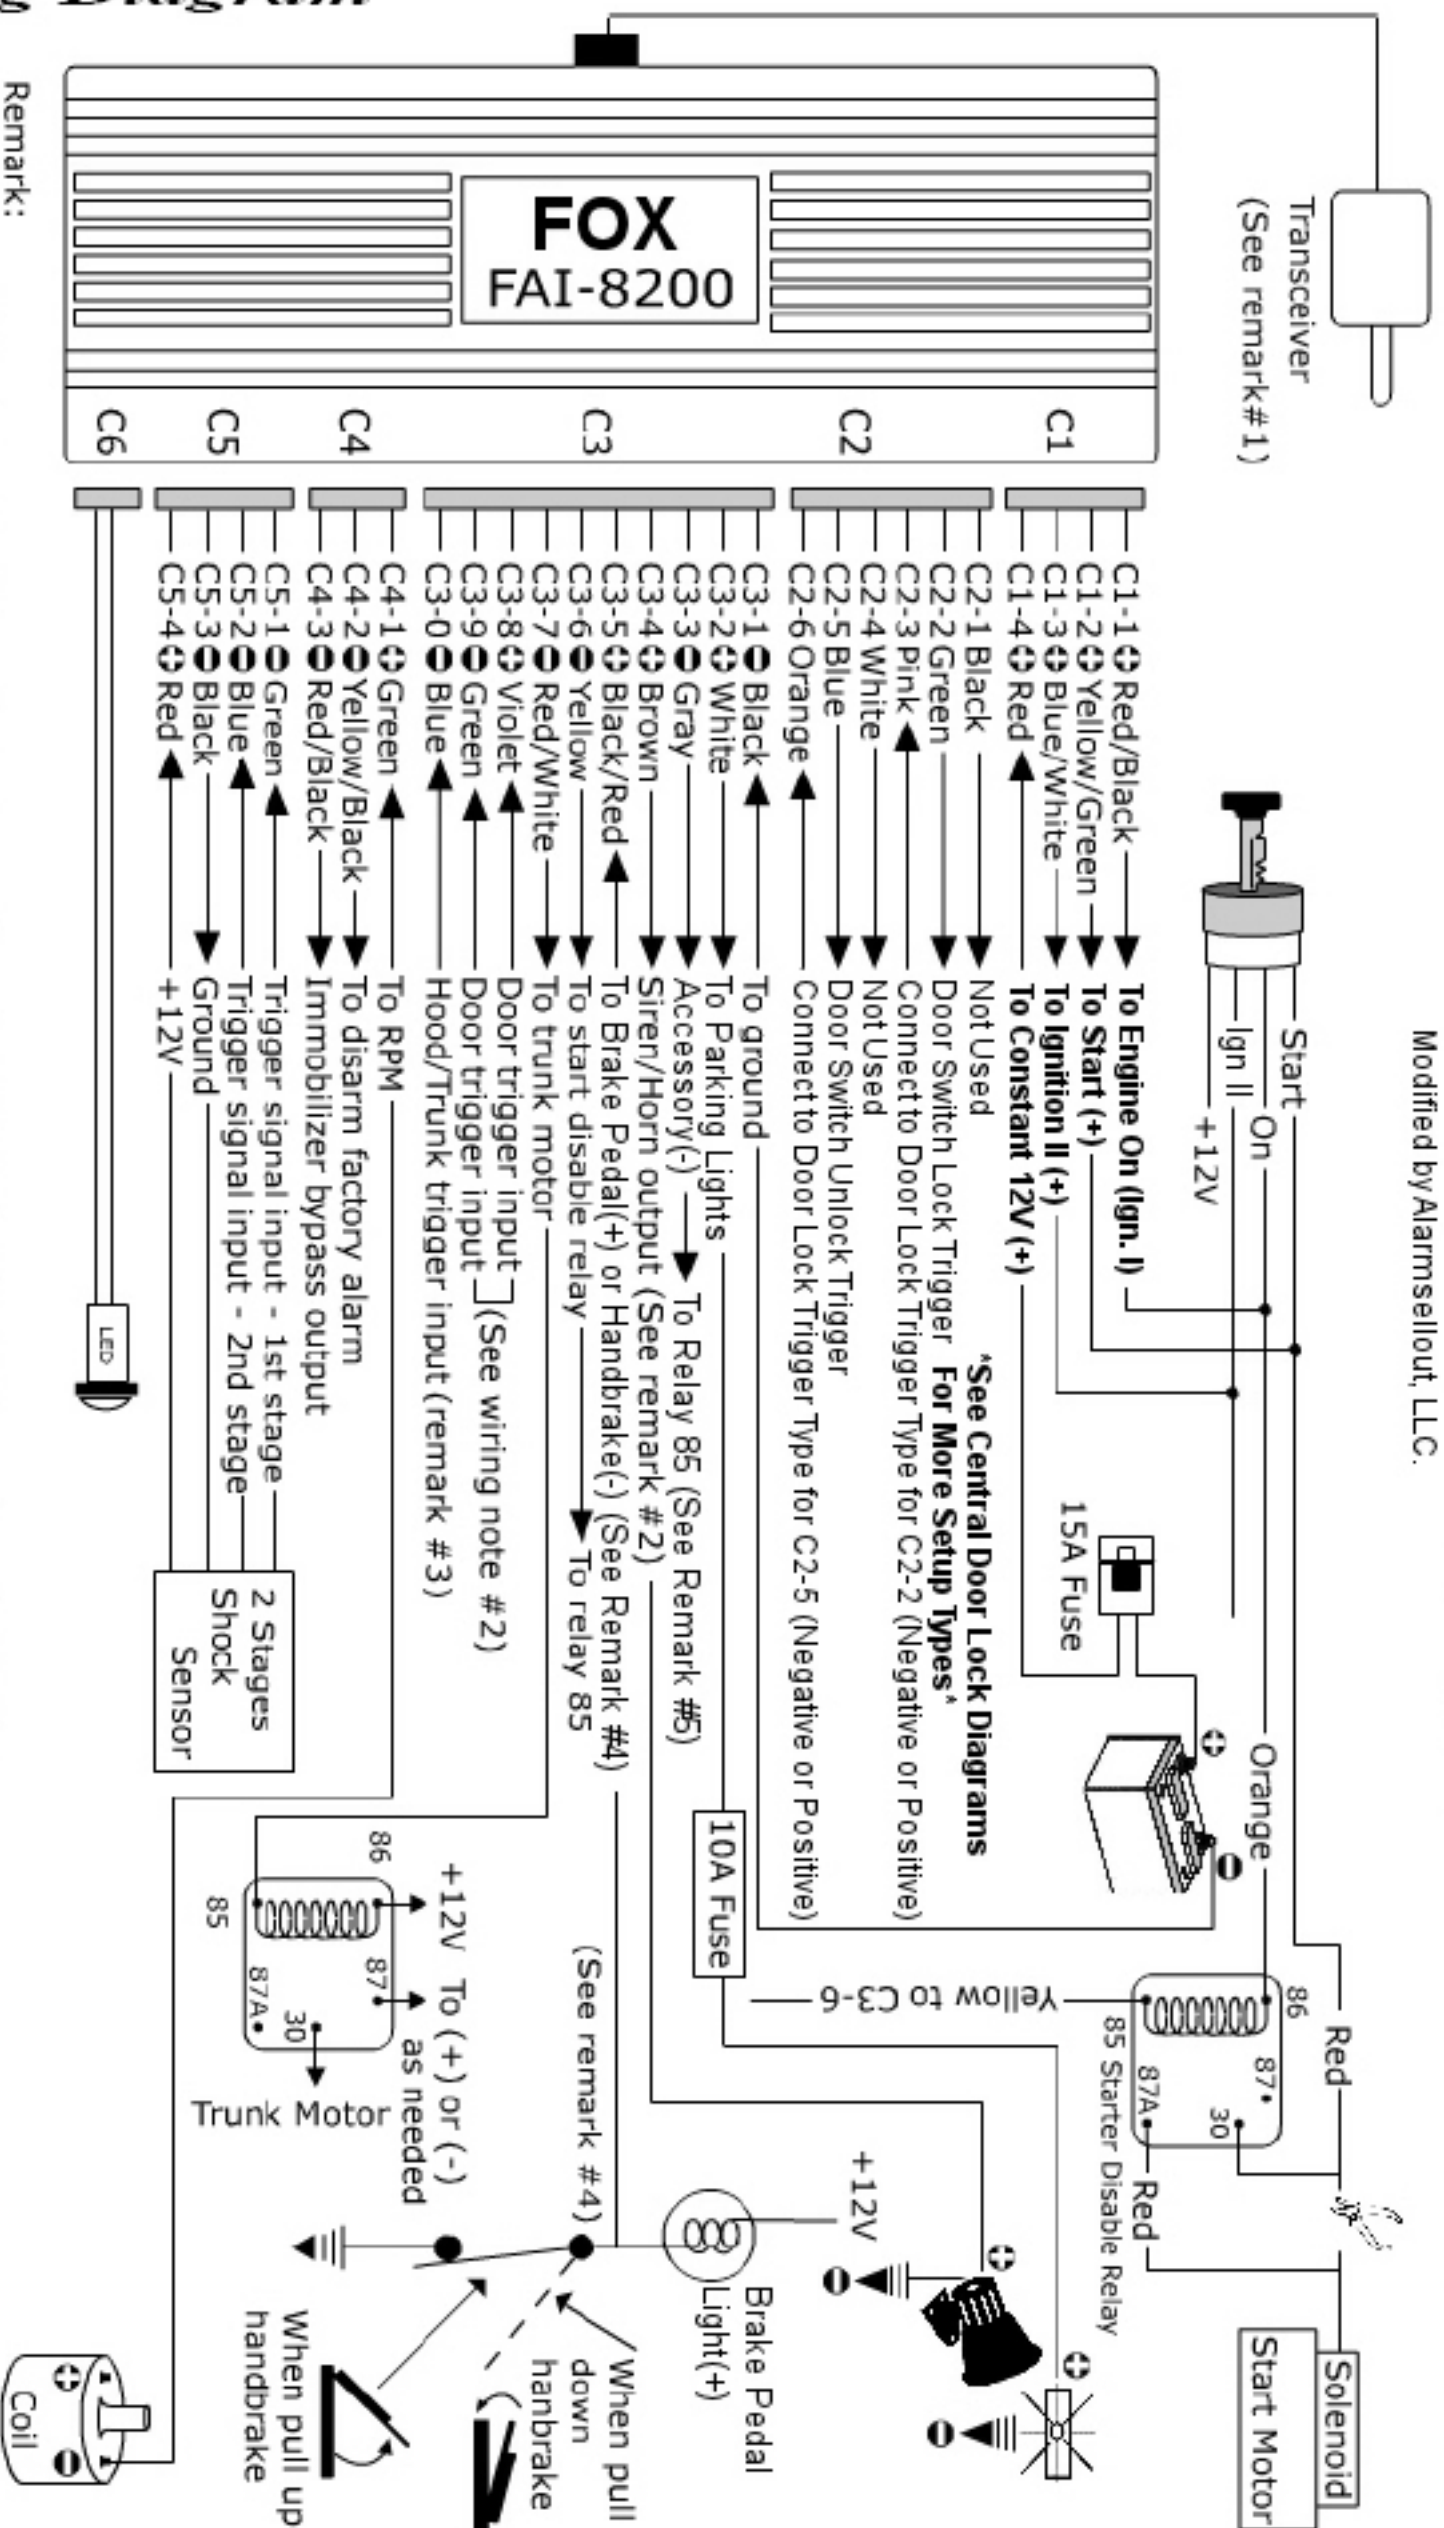

Remark:

- #1: Please get the transceiver away from any metal parts and also the shock sensor when installation
- #2: If connect to horn, please add one relay
- #3: Connect C3-0 to trunk lamp and hood parallel. Using a pin-switch for hood trigger.
- #4: Connect C3-5 to Brake Pedal Wire(+) if Automatic Trans. -- Connect to Ground(-) on Hand Brake if Manual Trans.
- #5: If your vehicle has an Accessory Wire that operates your engine or A/C, this wire must be connected to Relay #85(-)

Wiring Note #2

Connect to Trigger Wire
For Dome Light Supervision