FAI-8100 2-Way Paging Alarm Wiring Diagram

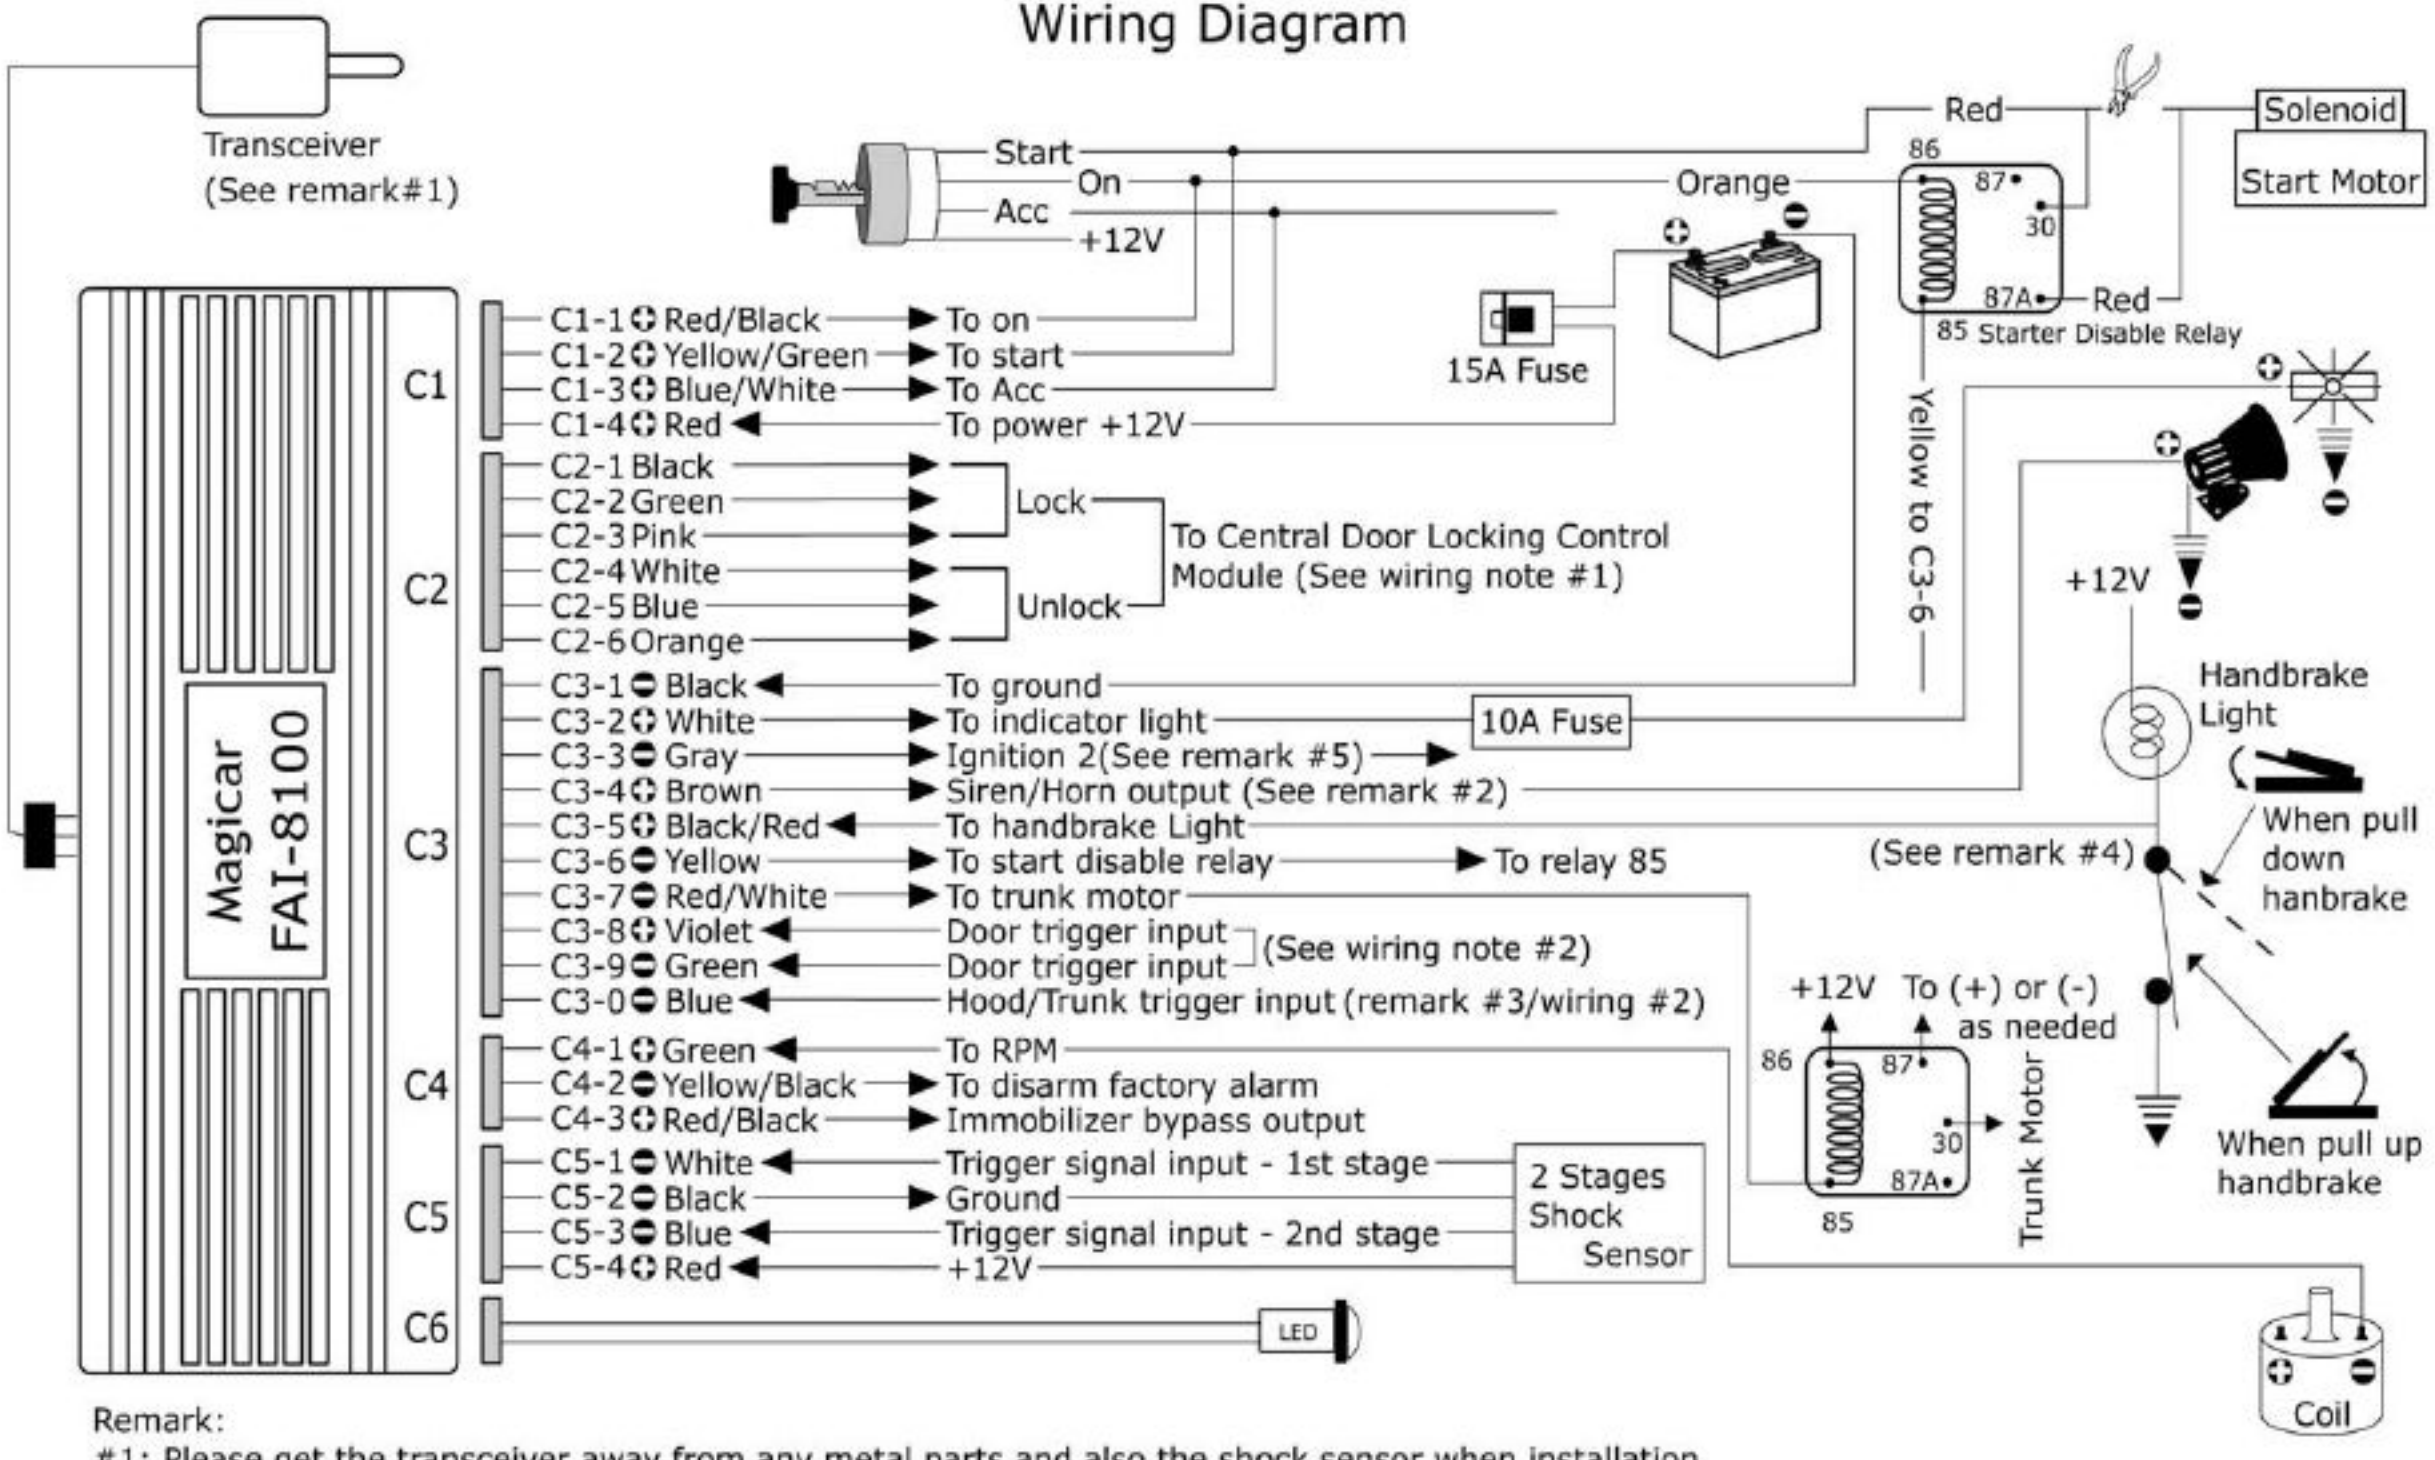

Remark:

#1: Please get the transceiver away from any metal parts and also the shock sensor when installation

#2: If connect to horn, please add one relay

#3: Connect C3-0 to trunk lamp and hood parallel. Using a pin-switch for hood trigger.

#4: Must connect C3-5 to ground otherwise the engine can't start with remotes

#5: If your vehicle has ignition 2(ACC 2), this wire must be connected to ignition 2(Acc 2) of the vehicle

Wiring Diagram